

XEA212Frequently asked questions.

1 External View

■ Front view

Operator display

Printer cover

Receipt paper

Drawer lock

Drawer

■ Rear view

Customer display
(Pop-up type)

AC power cord

Mode switch

Keyboard

■ Keyboard layout

↑	ESC	2	4	6	GC RCPT	L3	7	14	21	28	35	42	49	56	63	70
RCPT	EX	1	3	5	AUTO	L2	6	13	20	27	34	41	48	55	62	69
CLK #	VAT	⊗	•	CL	DEPT #	L1	5	12	19	26	33	40	47	54	61	68
#	PLU/ SUB	7	8	9	GLU	NBAL	4	11	18	25	32	39	46	53	60	67
⊖	%	4	5	6	CR1	CR2	3	10	17	24	31	38	45	52	59	66
PO	RA	1	2	3	CH1	CH2	2	9	16	23	30	37	44	51	58	65
∞	RF	0	00	NS	ST	TL	1	8	15	22	29	36	43	50	57	64

■ Key names

↑ Paper feed key

ESC Escape key

RCPT Receipt print key

CLK # Clerk code entry key

Non-add code/Time display key

EX Foreign currency exchange key

VAT Value added tax key

PLU /SUB PLU/Subdepartment key

GLU Guest look up key

NBAL New balance key

CR1 CR2 Credit 1 and 2 keys

⊖ Discount key

% Percent keys

PO Paid-out key

RA Received-on account key

∞ Void key

RF Refund key

1 ~ 6 Department keys

⊗ Multiplication key

CH1 CH2 Cheque 1 and 2 keys

ST Subtotal key

• Decimal point key

CL Clear key

00 0 ~ 9 Numeric keys

NS No sale key

GC RCPT Guest check receipt key

AUTO Automatic sequence key

DEPT # Department code entry key

L1 ~ L3 PLU level shift keys

TL Total key


1 ~ 70 Direct PLU keys

How do I prepare my XEA212 for set-up?

Take the XEA212 out of its box, remove the packing materials. Place the XEA212 on a flat stable surface, close to a power outlet. Also insure it will not be exposed to direct sunlight, and is away from water (taps, sinks, etc).

How do I clear the XEA212 to ready it for programming?

It is very important that you “initialise” the XEA212 correctly once you have removed it from the box, and are ready to start programming. If you do not “initialise” the XEA212, it might not work correctly.

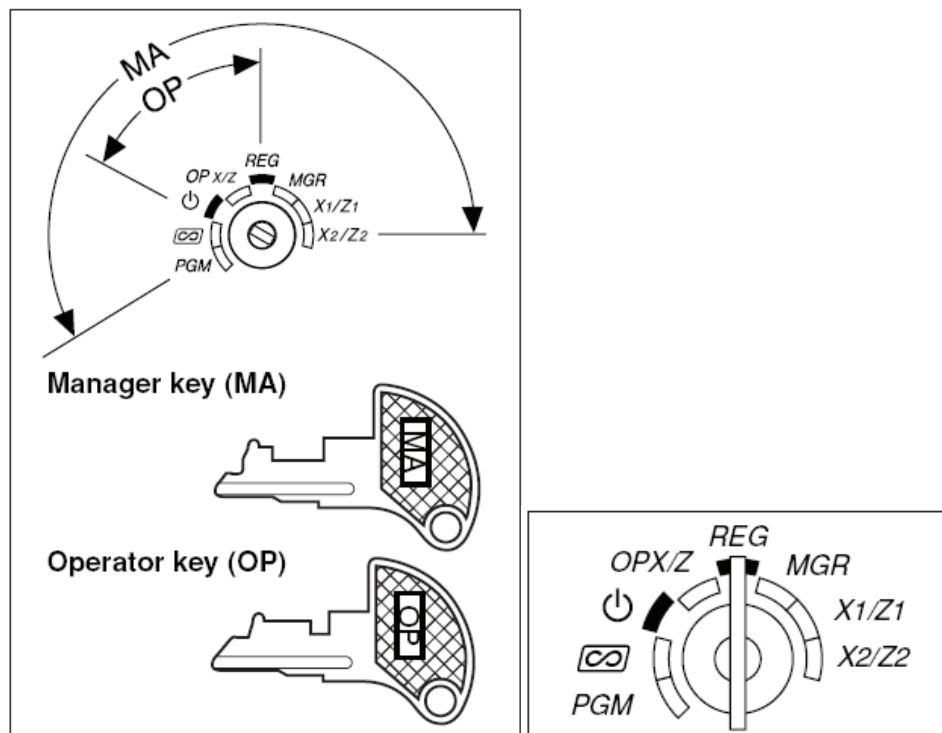


1. Insert the MA key into the mode switch and turn it to the REG position.
2. Insert the plug of the power cord into a power outlet.
This must be done without the batteries installed. If you have installed batteries; be sure to remove them before you start this procedure.
After about 10 seconds the buzzer will then sound three times. If the buzzer does not sound three times, please try again.

The cash register has now been “initialised”. If there were any data from a previous programming attempt they would have been cleared. The display should now show: NO BATTERY.


How to install the batteries, and why should I do so?

The XEA212 uses 3 x AA size batteries to hold its preset, and sales data in memory when it is switched off. If you do not install 3 x AA size batteries; the XEA212 will be cleared of all preset, and sales data when it is turned off.


1. Lift the printer cover up and forward, and detach it. Be careful of the paper cutter to avoid cutting yourself.

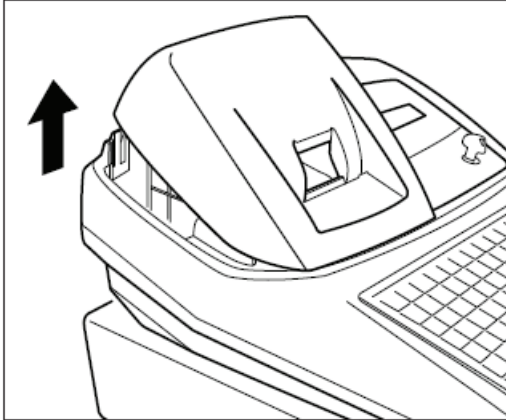

2. Open the battery compartment cover next to the paper roll cradle.

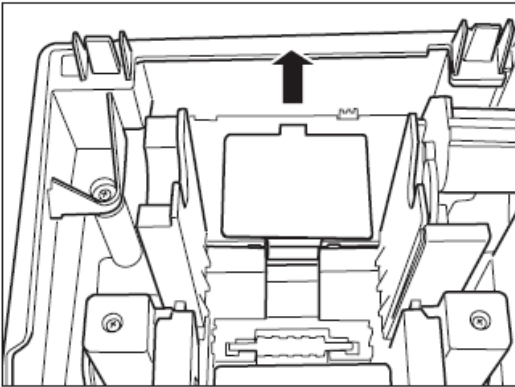

3. Install 3 alkaline AA size batteries. When the batteries are properly installed the “No Battery” message on the display will disappear.

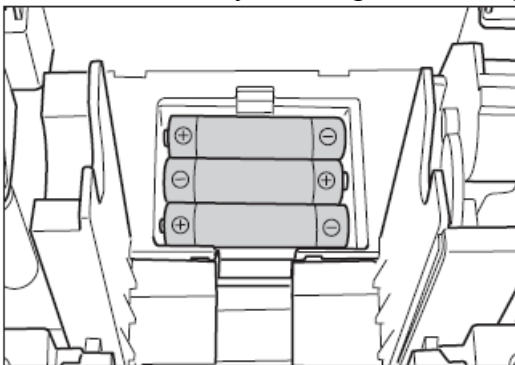


4. Close the battery compartment cover.

A set of new alkaline batteries once installed will keep the memory for up to one year without power. Please see the question on how to replace the batteries for details on when and how to replace the batteries. If the unit is not used for some months, you might not get any warning when you turn the XEA212 on that the batteries have failed. In this instance the XEA212 will initialise itself.


What sort of paper roll do I use, and how do I install it?

The XEA212 uses a thermally sensitised paper roll which is: 57mm wide. Its maximum diameter should be no more than 80mm.


1. Remove the print cover, be careful not to cut yourself on the paper cutter.

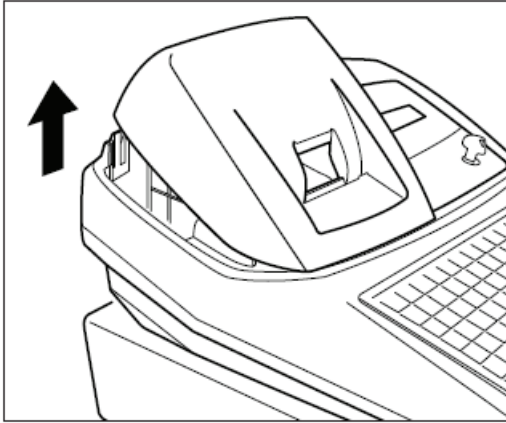


2. Lift up the green print roller release lever to unlock and open the print roller arm.

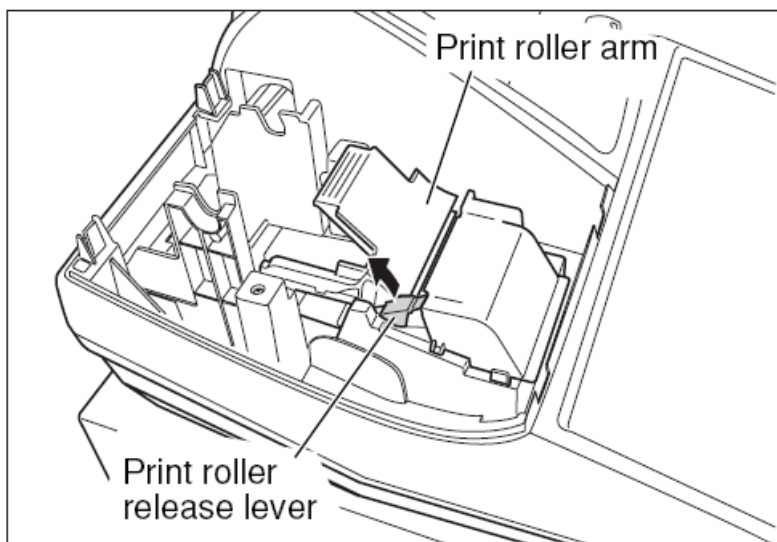


3. Set a thermally sensitive paper roll in the paper roll cradle as shown in the diagram below:

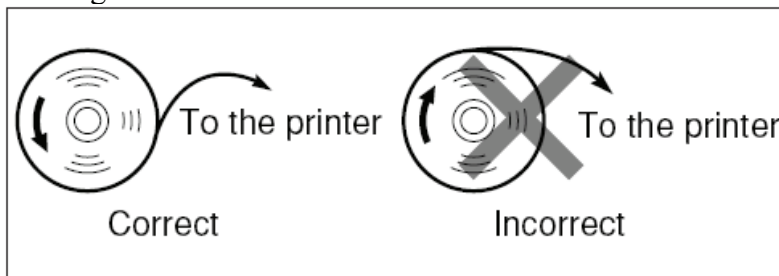

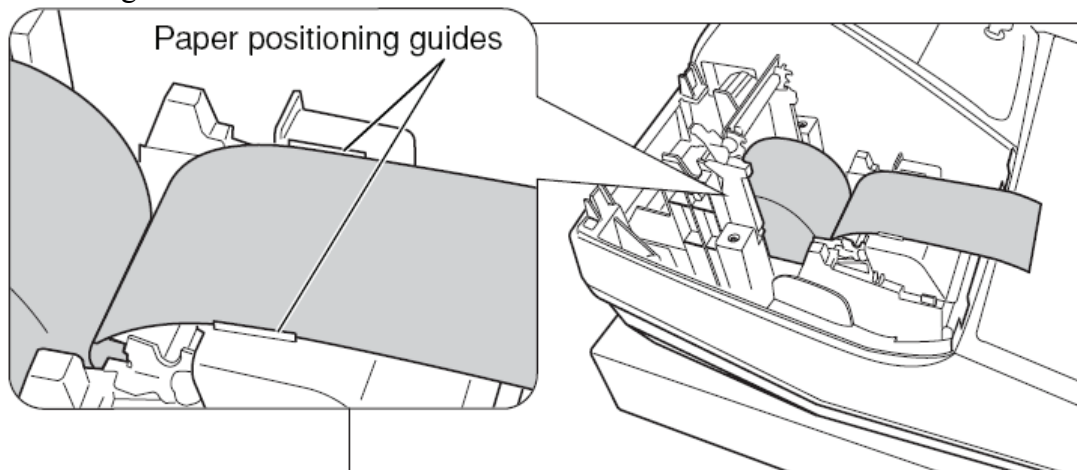


4. Feed the end of the paper along with the paper position guides as shown in the diagram below.

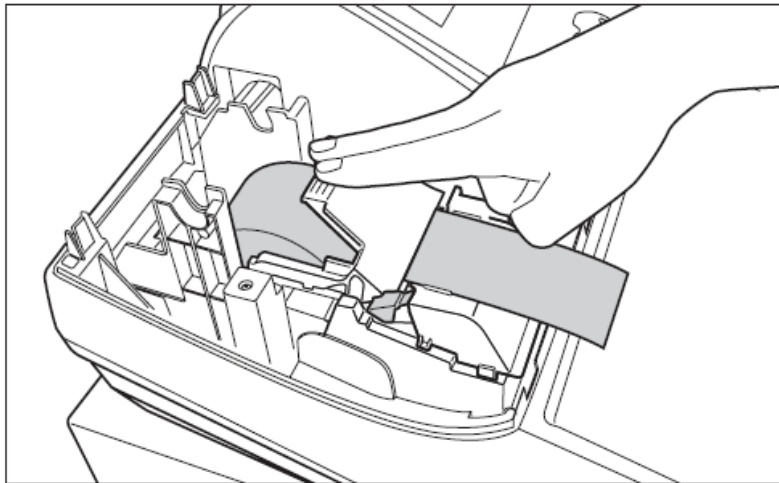


5. While holding down the paper, slowly close the print roller arm, and push down the arm until you hear a click. This means the arm is locked back in place. The paper will feed automatically



6. Cut off the excess paper using the edge of the inner cover, and replace the external printer cover. Press the  key to make sure the paper end comes out of the printer cover and clean paper appears.
If the paper end does not come out. Open the printer cover, and pass the paper end between the paper cutter and the paper guide of the printer cover, and replace the cover.
7. If you intend to use the print out as a journal: Insert the paper end into the slot in the spool. Press the  key to feed more paper if required.
Wind the paper two or three turns around the spool shaft. Set the spool on the bearing and press the  key to take up any slack in the paper. Replace the printer cover.

How do I set the time and date?

1. Set the mode key to the PGM position.

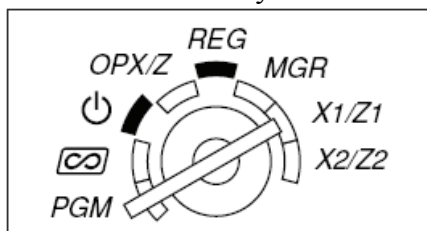

2. Enter the time as a four digit number. Use the 24 hour format. For example

2:30pm would be entered as

3. Press the key


4. Enter the date as an eight digits using the day-month-year format. For example

7th of December 2010 would be entered as

6. Press the key

How do I set a 10% GST rate?


1. Set the mode key to the PGM position

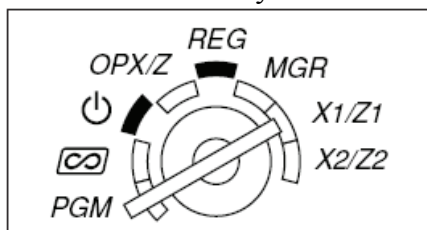

2. Enter:

How do I set a Department as taxable or not taxable?

1. Set the mode key to the PGM position

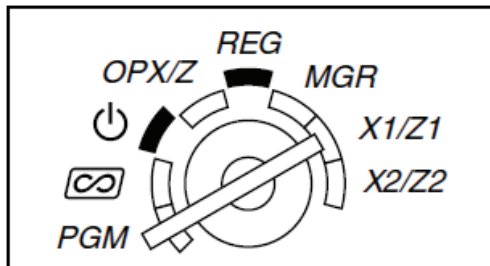

Department keys are the keys labeled 1 to 6 above the numeric key pad


2. To make a department taxable, enter:

For example to make department 1 taxable enter:

For example to make department 1 non-taxable enter:

How do I set the letters GST to print on the receipt?

1. Set the mode key to the PGM position

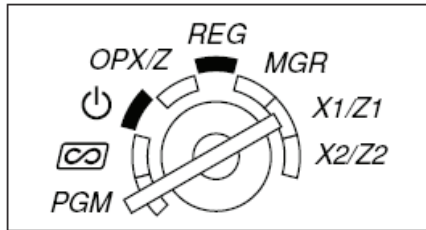

2. Enter: ST 3 • 8 ⊗ G S T ST TL


You can enter characters with the QWERTY key sheet overlay.

Keyboard sheet for text programming

↑ (ESC)	â	à	á	ê	è	é	í	ì	ï	ô	ò	ó	Â	Ñ	(BACK SPACE)
æ /Æ	ø	ù	û	ü	ï	¿	#	\$	%	&	'	^	©	Ç	□ =
Pt	œ	⊗	•	CL	1	2	3	4	5	6	7	8	9	0	[{] }
\$	£	7	8	9	Q	W	E	R	T	Y	U	I	O	P	@ / -
()	4	5	6	A	S	D	F	G	H	J	K	L	ß	;	+ *
“ ”	1	2	3	Z	X	C	V	B	N	M	Ä	Ö	Ü	,	< >
(SHIFT)	(DC)	0	00		ST	TL	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(DC)	(SHIFT)

How do I set the \$ symbol to print on receipts?

1. Set the mode key to the PGM position

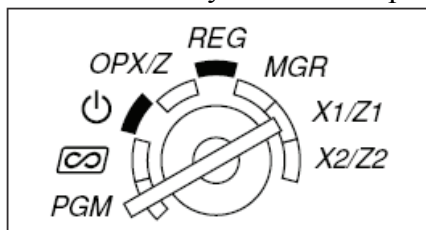


2. Enter:

ST 8 5 • SPACE SPACE SPACE \$ ST TL

Use the QWERTY keyboard overlay as shown above. Enter the 3 spaces and the \$ symbol.

How do I give a department a descriptive name?

1. Set the mode key to the PGM position

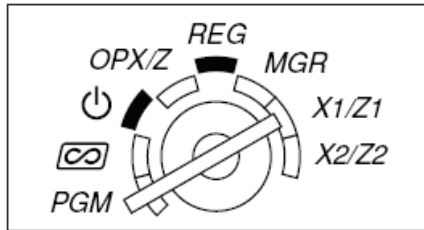

Department keys are labeled 1 to 6 above the numeric key pad.

2. Enter: **ST** **1** **•** **DEPT KEY** enter characters

You can now enter up to 16 characters with the QWERTY keyboard overlay.

Keyboard sheet for text programming

↑	(ESC)	â	à	á	ê	è	é	ì	í	î	ô	ó	ô	õ	À	Ñ	(BACK SPACE)
æ	ø	û	ù	ú	!	?	#	\$	%	&	'	^	€	Ç	□	=	
Pt	œ	⊗	•	CL	1	2	3	4	5	6	7	8	9	0	[{] }	
§	£	7	8	9	Q	W	E	R	T	Y	U	I	O	P	@	/ -	
()	4	5	6	A	S	D	F	G	H	J	K	L	ß	;	+	*
“	”	1	2	3	Z	X	C	V	B	N	M	Ä	Ö	Ü	,	<	>
(SHIFT)	(DC)	0	00		ST	TL	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(DC)	(SHIFT)	


3. Press the **ST** to confirm your selection.
4. Press the **TL** key to save your selection.

How do I program the PLUs? (Price Look Ups)

The XEA212 is set at Master Reset (Factory Default) to have 210 PLUs. These PLUs are assigned to 3 keyboard levels. PLUs 1 to 70 are on level one. PLUs 71 to 140 are on level two, and PLUs 141 to 210 are on level three. PLUs are used to “look up”, a description and price for often sold items.

Please follow the steps below to program a PLU

1. Set the mode key to the PGM position

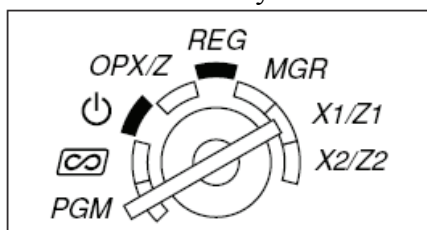

2. Press a PLU key (1 to 70). These are the numbered keys to the right of the numeric key pad). If the PLU is on level 2, press the L2 key before the PLU key. If it is on level 3 press the L3 key before the PLU key
3. For example press **1** to right of the **TL** key to select PLU 1.
4. Press the **00** key.
5. Type in you PLU’s description, up to 16 characters. Use the QWERTY key sheet overlay.

Keyboard sheet for text programming

↑	(ESC)	â	à	á	ê	è	é	í	ì	ï	ô	ò	ó	Å	Ñ	(BACK SPACE)
Æ	ø	û	ù	ú	ï	¿	#	\$	%	&	'	^	©	Ç	□	=
Pt	œ	⊗	•	CL	1	2	3	4	5	6	7	8	9	0	[{] }
\$	£	7	8	9	Q	W	E	R	T	Y	U	I	O	P	@	/ -
()	4	5	6	A	S	D	F	G	H	J	K	L	ß	;	+
“	”	1	2	3	Z	X	C	V	B	N	M	Ä	Ö	Ü	<	>
(SHIFT)	(DC)	0	00		ST	TL	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(DC)	(SHIFT)

6. Press **ST** to confirm the description.
7. Use the numeric key pad to enter the PLU’s price in cents. For example \$14.00 is entered as 1400
8. Press **ST** to confirm the price.

9. Press one of the department keys above the numeric key pad to associate the PLU with a department. You must associate a PLU with a department.

10. Press **ST** to confirm the department association.

Press the **1** on the numeric keypad to select a PLU with a preset price.


Press the **0** on the numeric keypad to select a PLU with an open price. PLUs with open prices are known as Sub-departments on Sharp ECRs.

11. Press **ST** to confirm the PLU's type.

12. Press the **TL** key to save your PLU

How do I get my business name and ABN to print on the receipt?

1. Set the mode key to the PGM position

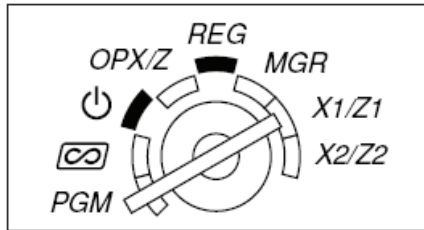

2. Enter:

3. Type each line of your information, up to 6 lines as follows:

4. Enter the Top (first) line do the following:

use the keyboard to type up to 24 characters

5. Enter the second line do the following:

use the keyboard to type up to 24 characters

6. Enter the third line do the following:

use the keyboard to type up to 24 characters

7. Enter the fourth line do the following:

use the keyboard to type up to 24 characters

8. Enter the Fifth line do the following:

use the keyboard to type up to 24 characters

9. Enter the sixth (last) line do the following:

ST **4** **•** **6** **⊗** use the keyboard to type up to 24 characters

ST **TL**


Keyboard sheet for text programming

↑ (ESC)	â	à	á	ê	è	é	î	ï	í	ô	ò	ó	Ä	Ñ	(BACK SPACE)
æ	ø	û	ü	ú	ï	¿	#	\$	%	&	'	^	¢	ç	□ =
Pt	œ	⊗	•	CL	1	2	3	4	5	6	7	8	9	0	[{] }
§	£	7	8	9	Q	W	E	R	T	Y	U	I	O	P	@ / -
()	4	5	6	A	S	D	F	G	H	J	K	L	ß	;	+
“ ”	1	2	3	Z	X	C	V	B	N	M	Ä	Ö	Ü	,	>
(SHIFT)	(DC)	0	00		ST	TL	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(DC) (SHIFT)

How do I set the printer to print a receipt or a journal?

The XEA212's printer can be set print: a receipt, or a journal.

1. Set the mode key to the PGM position

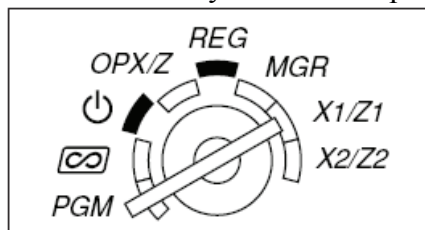

2. To set the printer to print receipts, do the following:


Enter: **ST** **6** **⊗** **1** **1** **0** **0** **0** **1** **1** **1** **ST** **TL**

3. To set the printer to print a journal, do the following:

Enter: **ST** **6** **⊗** **0** **1** **0** **0** **0** **1** **1** **1** **ST** **TL**

How do I allow for printing copy receipts?

1. Set the mode key to the PGM position

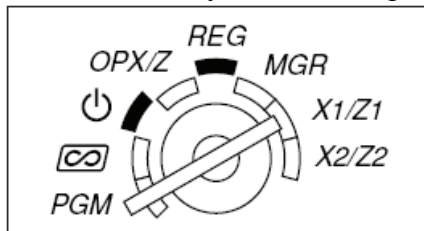


2. To allow for printing copy receipts:

Enter:

ST	6	3	⊗	0	1	0	1	0	0	0	1	ST	TL
----	---	---	---	---	---	---	---	---	---	---	---	----	----

How do I stop a receipt printing at the end of each sale?

1. Turn the Mode key to OP X/Z position

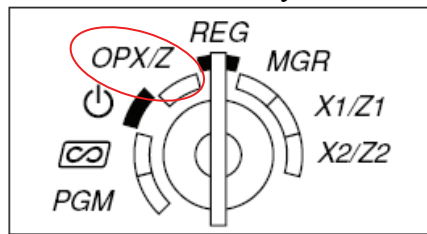

2. Press the

RCPT


 key
3. Turn the mode key back the REG position
A receipt will only print after a transaction if you press the

RCPT

 key.

How do I make the decimal point key work; so I can sell other than full units. For: example 2.5 meters of something?

1. Set the mode key to the PGM position

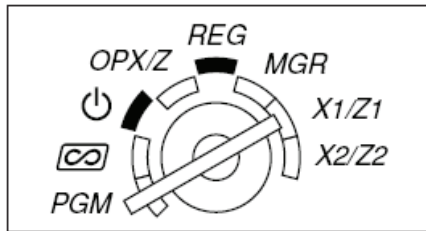

2. To allow for fractional units:

Enter:


ST	5	⊗	0	0	0	0	0	0	0	0	0	ST	TL
----	---	---	---	---	---	---	---	---	---	---	---	----	----

How do I turn off the Electronic Journal full error message?

The XEA212 has an Electronic Journal. It cannot be turned off. It works on a FIFO (First in First out) basis. When the journal is nearly full the XEA212 will warn you that this is so. This gives you the option to print the journal before it deletes the oldest entries to make space for the newest.

You can turn this warning off. To turn this warning off do the following:

3. Set the mode key to the PGM position

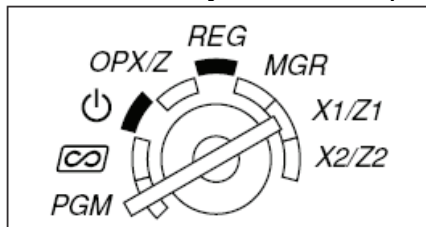

4. Enter:

ST	6	8	⊗	0	0	1	0	0	0	1	0	ST	TL
----	---	---	---	---	---	---	---	---	---	---	---	----	----


How shall I know when it is time to replace the batteries?

The XEA212 will display a low battery warning message “LOW BATTERY” when the batteries are near to the end of their life. It will display the warning message “NO BATTERY” when the batteries are past the end of their life, or are not installed.

The “LOW BATTERY” warning message is normally displayed about 2 days before the end of the batteries’ life. You should arrange to replace the batteries within this period to reduce the chance of losing programming and sales data from your XEA212. If you see “NO BATTERY” displayed it is important that you do not turn the XEA212 off until you have replaced the batteries. If you do turn it off before you have replaced the batteries; you will lose all your programming and sales data.

To replace the batteries, do the following.


1. Make sure the XEA212 is plugged in.
2. Remove the printer cover.
3. Open the battery compartment cover next to the paper roll cradle, and remove the old batteries.

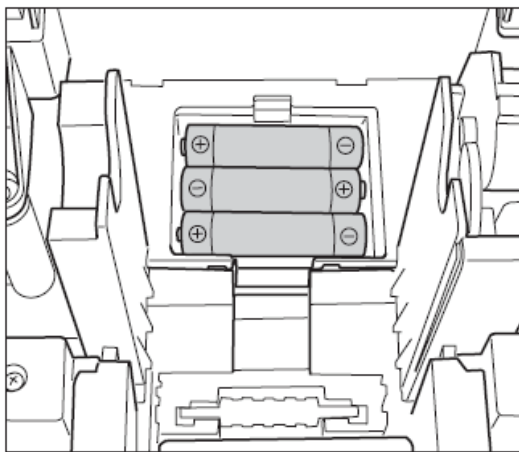

4. Install three (3) new alkaline batteries (AA size), in the battery compartment. Be sure the positive and negative poles of each battery are facing in the correct direction. When they are installed correctly, the low battery or no battery message will disappear.
5. Close the battery compartment cover.
6. Replace the printer cover.

How do I make a sale?

1. Turn the mode key to REG

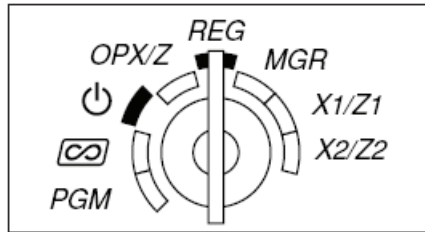

2. Sign on a clerk. For example to sign on clerk 1 enter:

3. Enter the a price in cents. For example \$15.00 is entered as:

4. Press the department key you wish to apply the \$15.00 sale to for example department 2. Department keys are the keys labeled 1 to 6 above the numeric keypad.

5. Or Press a PLU key for example to register a pre-programmed item. PLU keys are the keys labeled 1 to 70 to the right of the key

6. Press to finalise the sale to cash

The XEA212 display shows “NOT ASSIGNED” and I cannot make a sale. How to I fix this?


You must sign a clerk on. Please do the following to fix this problem.

1. Press the button to clear the “NOT ASSIGNED” message.
2. Enter: to sign on clerk 1.

How do I make a Correction after finalizing a Transaction (void mode)?

When you need to correct (void) incorrect entries after the sale has been finalised, Please use the following procedure:


1. Turn the mode key to the  Position with the MA key.

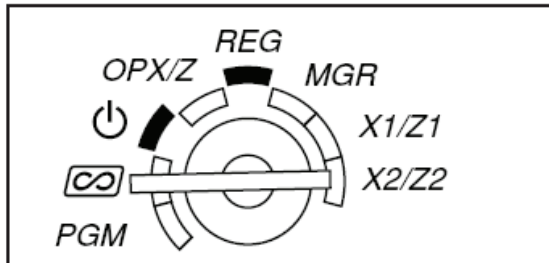

2. Re-enter the sale information you wish to remove. All the amounts you enter will be removed from the relevant Department and/or PLU as well as the Transaction totals such as Cash in Drawer. The amounts removed will be added to the Void Mode Transaction totaliser. A Void Mode receipt will print even if the receipt is switched off.

Incorrect receipt	
DEPT. 04	*10.00
DEPT. 03	*1.50
ITEMS	2Q
CASH	*11.50

 

Cancellation receipt	
*  MODE	*
DEPT. 04	*10.00
DEPT. 03	*1.50
ITEMS	2Q
CASH	*11.50


The XEA212 displays “OVER LIMIT” when I try to finalise a sale to cash. How do I fix this?

1. First you must either: finalise the sale to Credit card **CR1** and **CR2** or Cheque **CH1** or **CH2**

or do a subtotal void to clear the sale. Subtotal void is done by entering:

ST **∞** **ST**

2. Turn the mode key to PGM

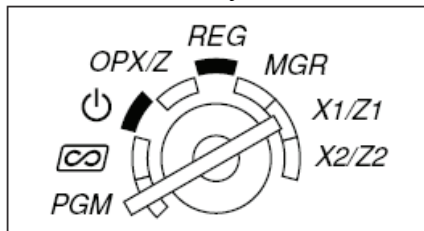

3. Enter the following:

8 **⊗** **ST** **TL**

4. Turn the mode key back to REG.

The “OVER LIMIT” problem should be fixed.

How do I produce sales reports?

There are two type types of reports: X or e(X)amine reports
Z or (Z)ero reports

X reports read out your sales data, but do not clear it from the XEA212
Z reports read out your sales data, and clear it from the XEA212

There are two levels of X and Z reports: Daily
Period

A daily X report allows you to examine your daily figures anytime during the day without clearing them.


A daily Z report allows you to print out your daily figures at the end of the day, and clear them. This is done to ready the XEA212 for the next day's trading. The daily Z report also adds its data to the Period report memory.

A Period X report allows you to see your sales data for the period up to the time of the last Daily Z report.

A Period Z report allows you to print out your period sales data, and clears it to ready the XEA212 for the next period.

To produce a daily X report, do the following:

1. Turn the mode key to X1/Z1 position

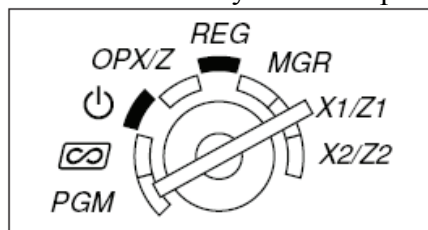


2. Press the TL key

Your daily X report will print.

To produce a daily Z report, do the following:

3. Turn the mode key to X1/Z1 position

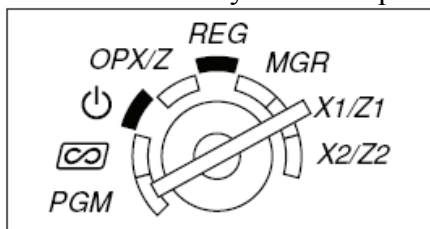


4. Press   key

Your daily Z report will print.

To produce a period X report, do the following:

5. Turn the mode key to X2/Z2 position

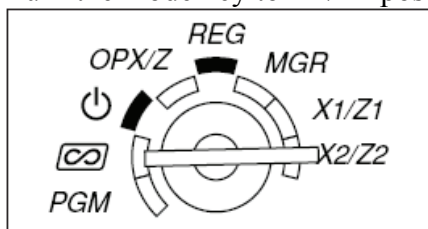


6. Press the  key

Your period X report will print.

To produce a period Z report, do the following:

7. Turn the mode key to X2/Z2 position

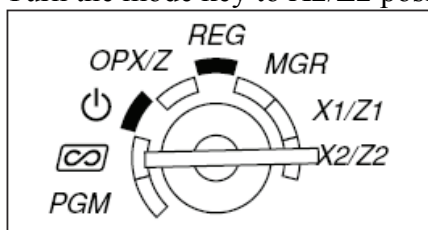

8. Press   key

Your Period Z report will print.

This list of Frequently Asked Questions is not intended to replace the XEA212 instruction manual. It does not list all the functions and features of the XEA212. Please refer to the XEA212 instruction manual for more guidance on functions and programming steps not covered in these “Frequently Asked Questions.”